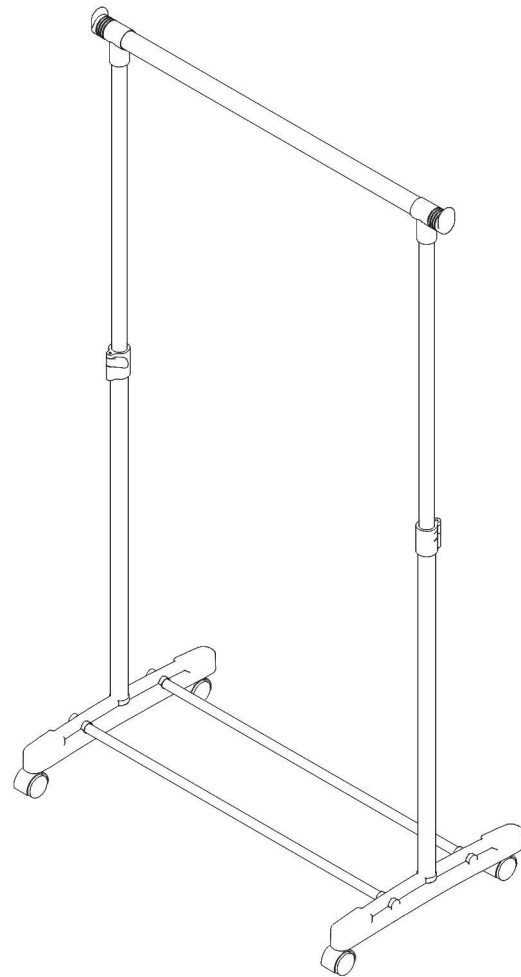
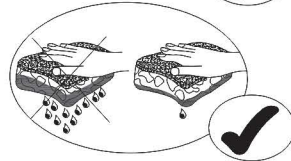
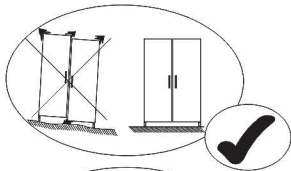
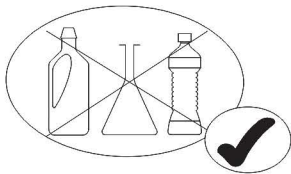


189336-00

189338-00

189340-00

WIZZ

NÁVOD K MONTÁŽI**30 min****CZ POZOR**

Dodržujte pokyny a postupy uvedené v tomto návodu k montáži.

EN CAUTION

FOLLOW CAREFULLY THE ASSEMBLING INSTRUCTIONS DESCRIBED IN THE DIRECTIONS

DE SICHERHEITSVORSCHRIFTEN

BEACHTEN SIE BITTE UNBEDINGT DIE ANGEGBENEN AUFBAUVORSCHRIFTEN

ES SEGURIDAD

RESPECTAR LAS INSTRUCCIONES DE MONTAJE DESCRIBIDAS EN EL FOLLETO

NL VEILIGHEID

DE IN DE GEBRUIKSAANWIJZING BESCHREVEN INSTRUCTIES RESPECTEREN

IT SICUREZZA


RISPETTARE LE ISTRUZIONI DI MONTAGGIO DESCRITTE NEEL' AVVERTENZA

PT SEGURANCA




RESPEITAR AS INSTURAÇOS DE MONTAGEH DESCREVEDAS NA INSTRUÇÕES DE USO

PL UWAGA


PROSZĘ PRZESTRZEGAĆ INTRUCJI MONTAŻU

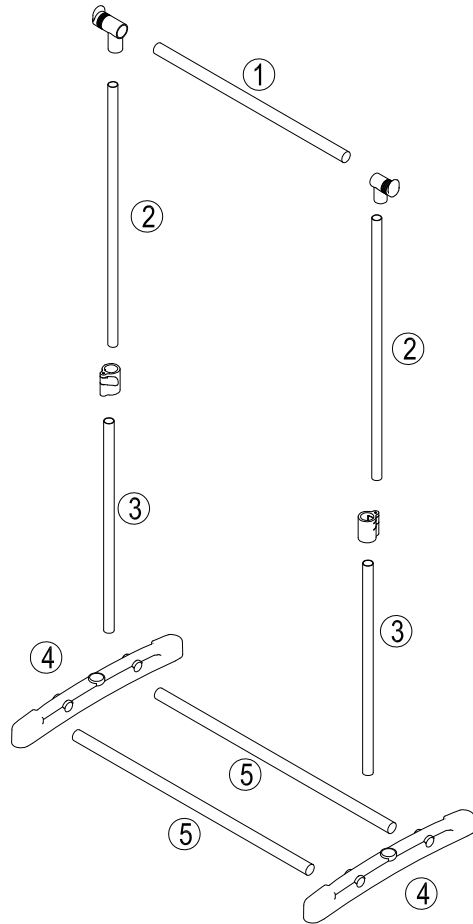



①	Ø32x 794mm	x1
②	Ø25 x 790mm	x2
③	Ø29 x 700mm	x2
④	426 x 37mm	x2
⑤	Ø16 x 735mm	x2

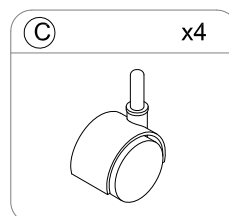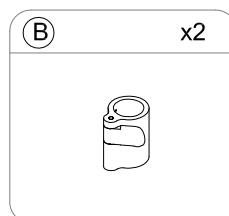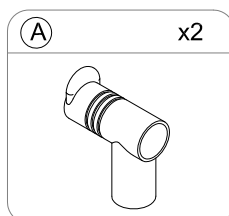



1

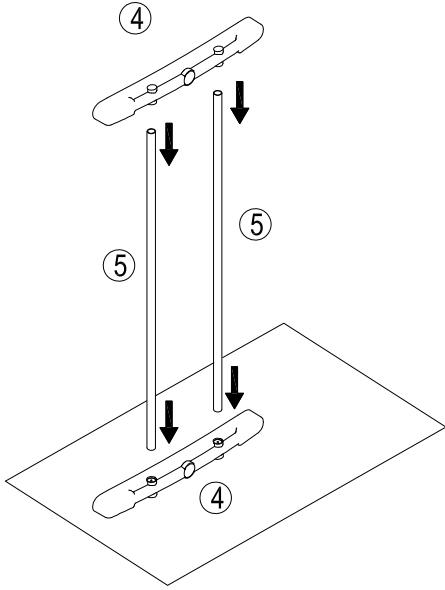


2

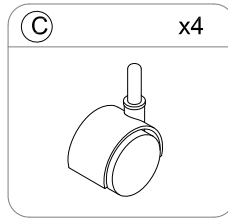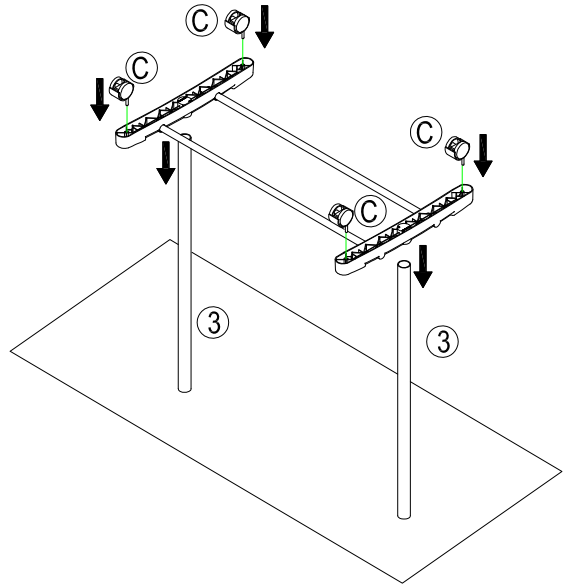

3

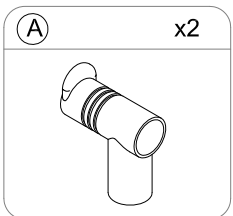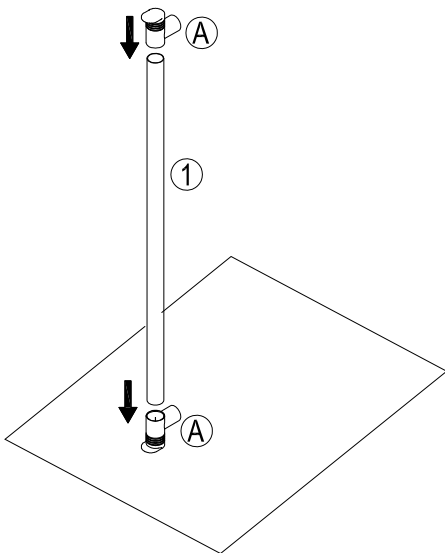

4

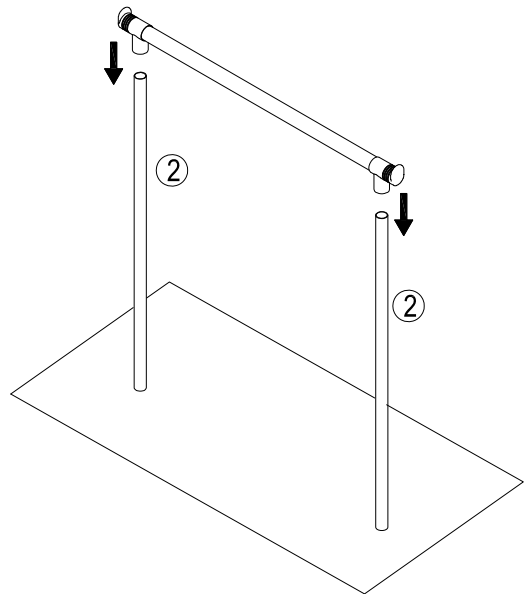

5

